OPERATING AND INSTRUCTION MANUAL

Plug-in Island Freezer Plug-in Multi-deck Cabinet Plug-in Serve Over Counter Plug-in Glass Door Fridge/Freezer



CB CE M.

Before installing the island freezer, please read these instructions carefully.

SAFETY PRECAUTIONS

 The purpose of the safety precautions in this manual is to ensue safe and correct use of the unit to minimize risks that could cause serious damage and injury to you or other persons. The safety precautions are divided into WARNINGS and CAUTIONS. Cases where improper handing of the unit could lead to death or serious injury are listed under the "AWARNING" heading. However, the cases listed under the "ACAUTION" heading could also lead to serious results. To ensure the safety, adhere strictly to both types of safety precautions.

- Text set off by the exclamation mark contains information that should be strictly adhered to.
- After reading the instruction manual, store it an easily accessible place where the user(s) of this product can easily find it.

PRECAUTIONS FOR INSTALLATION

△ WARNING



Installation should be performed only by the dealer or a qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock, or fire.

PRECAUTIONS FOR INSTALLATION

△ WARNING



Installation should be performed only by the dealer or a qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock, or fire.



 


Never splash water directly onto the product or wash with water as short circuit and electrical leakage could result.






Never put flammable or volatile substances into the unit as explosion and fire could result.





 Do not damage, modify, excessively bend, strain, twist or bundle up the power cord. Also, placing heavy objects the power cord or squeezing it in a tight place could damage it, possible resulting in electrical





Use a dedicated wall outlet. Do not use extension cords or convenience receptacles as this could result in electrical shock, overheating and a fire





Never use flammable spray cans or leave flammable substances near the unit. Sparks from electrical switches could result in explosion and fire





SAFETY PRECUATIONS

 
△ WARNING



The equipment is intended for storage and display of frozen foods for sale. Do not use for other purpose than the intended as this could adversely affect items placed in the unit.











For indoor use only. Using the unit in a location exposed to rain could result in electrical leakage and electrical shock.



Install the unit in a location where the

performed, the unit could tip over and

falling shelves and products could cause

(60)

of the unit. If the floor is not sturdy enough or installation is incorrectly

personal injury.

floor is sturdy enough to support the load



Never place heavy objects or items containing water on top of the unit. Objects could fall down and cause injury and spilled water could deteriorate the insulation of electrical components and result in electrical leakage



If you find gas leakage, please don't touch the freezer and close gas and open the door for ventilation. Gas leakage cause explosion, fire and fire injury.



 


Store the unit in a location where it is not exposed to rain. Using a unit that has been exposed to rain could result in electrical leakage and electrical shock.



Away from hot air sources. Cooling performance is reduced if the unit is placed near heat sources such as hot plates and stoves and if it is exposed to direct sunlight.









Should the unit need temporary storage, make sure not to store the unit in a location where children play and take precautions so that the door cannot be completely closed. This will minimize the risk that a child becomes trapped inside the compartment.

 
△ WARNING

WELL VENTILATED PLACE

Please make more than 10cm space between cooler and wall. If there are no space, cooling capacity can drop down.



If installation in a damp location is unavoidable, also install an electrical leakage circuit breaker. If no electrical leakage circuit breaker is installed, electrical shock could result.





Never climb onto the unit. The top glass door could break and cause material damage or injury.



Disconnect the power cord plug from the wall outlet before moving the unit and make sure that the power cord is not damaged during transport. A damaged power cord could result in electrical shock





Grasp the handle when closing the door. Holding at other positions could result in pinched fingers and injury.



Do not push hand against or apply excessive force to glass surfaces as the glass could break and cause injury.





When disconnecting the power cord plug from the wall outlet, hold at the plug main body close to the outlet. Pulling the cord could cause wire breakage, possible resulting in overheating and fire.







Make sure that the unit does not tip over or fall when it is moved. A falling unit could cause serious injury.





Do not throw items onto the shelves and do not place items totaling more than 50kg on each shelf. The shelf could fall down, possibly cause injury.



Be sure attach and secure shelves correctly. An improperly attached shelf could fall down and cause injury.







PLACING ITEMS IN THE EQUIPMENT

Pay attention to the following points:

- Do not put the items beyond the loading line.
- Please do not display goods on the bottom. Please put goods on the shelf.

CLEANING

△ WARNING

To prevent any electrical shock hazards, always disconnect the power cord plug from the wall outlet before cleaning.

 
EXTERIOR AND COMPARTMENT

• Wipe with a soft, dry cloth. If very soiled, wipe with a cloth that has been moistened with a detergent. Then wipe with a cloth that has been dipped in water.

△ WARNING

WARNING: Do not splash water directly onto the equipment and do not wash with water. Short-circuit and

- Clean the cooler regularly to keep it clean at times.
- Never use polishing powder, soap powder, benzene, Oil or hot water as these will damage the painting and Plastic components



CHECKS

To ensure the safety, perform the following checks after cleaning

- Is the power cord plug firmly inserted into a dedicated wall outlet? Confirm that the plug is not abnormally hot.
- Check the power cord for cracks and damage. Should the slightest irregularity be observed, contact the dealer from whom you purchased this unit or our customer's service.

HOW TO USE

BEFORE USE

- Remove shipping package, tape, etc and leave doors open ventilation for a while.
- The unit is cleaned before shipment. However, clean the compartment interior once after delivery
- Please insert power supply plug into the wall outlet, single-phale to cat voltage
- Allow the unit to operate for about 1 hour to cool the compartment before placing items in the cooler

WAIT 5 MINUTES OR MORE BEFORE RE-STARTING

• Restarting the unit immediately after it has been turned off may cause fuses to blow and activate the circuit-breaker, the compressor may be overloaded, and/or other damage may occur

TEMPERATURE ADJUSTMENT

• The temperature controller is well set at the factory. Do not change the settings of the temperature controller without the professional instructions.

DRAIN TRAY

- Defrosting is performed automatically and drain water is collected in the drain tray.
- If there is the plastic water tray, please collect the defrosting water with it and pull over the water tray periodically.
- If there is no plastic water tray, the defrosting water is evaporated automatically.

EFFICIENT USE

Please follow the below instruction, you could save energy.

- To prevent cold air from escaping, open and close the door quickly and keep the door opened for as short a time as possible.
- Please install the unit in the place which is well-ventilated.

In case the unit shows operating problems, check the following prior to calling the authorized service company:

SYMPTOMS	POSSIBLE CAUSE	SOLUTION
The unit is not operating	Faulty electrical contact	Verify electrical connections
	Poor electrical power	Check the power connection and electrical outlet
	Thermostat setting "0"	Change the thermostat setting to a higher number
Not reaching desired temperature	Unit is exposed to direct sun light	Relocate the unit to a shaded area
	Thermostat is not properly adjusted	Adjust the thermostat setting to a higher number
	Clogger condenser	Review Maintenance instrutions listed in the manual
	Blocked grills	Clean the grills of any debris collected
	Door not properly closed	Check the leveling of the unit and door seal
	Products poorly distributed or excess product load	Redistribute the product load according Start instrutions
	For Models with electronic temperature controller, indicates E0 or E1	Unplug the unit from the outlet. If the error continues, contact an authorized service technician
Abnormal noises	The unit is not properly level	Level the unit following the Installation instructions
	Friction with other objects	Move the unit and avoid contact with other objects
Water on the floor	Drain hose is outside of the drain pan	Lovate the hose in the drain pan

WARRANTY & SERVICE

- Warranty is valid for one year from the date of purchase.
- The warranty covers defective parts and workmanship. The following items are not covered under warranty:
 - 1.Loss of products.
 - 2. Damages caused by transportation. ${\tt 3.Damages}\ caused\ by\ modifications\ made\ by$
 - unauthorized individuals.
 - 4. Fluorescent lights, glass parts or plastic components.
 - $5. Worn \ out \ plugs \ or \ defective \ electrical \ components.$ 6. Maintenance of the unit.

Warranty is valid showing the purchase receipt.

We offer a professional service network which offers the necessary technical support for your unit.